

Scheduled Maintenance

Whenever you stop for fuel

[Check the engine oil level](#)

[Check the windshield washer fluid level](#)

[Check the tire pressure](#)

Every 3,000 miles

[Change engine oil and oil filter](#)

[Check power steering fluid level](#)

[Check brake fluid level](#)

Check exterior lights

Clean the battery connections

Every 6,000 miles

Rotate tires

Inspect exhaust system connections

Lubricate all hinges, checks, latches

Lubricate door rubber weather strips

Clean and clear body water drain holes

Every 15,000 miles

Replace air filter

Replace PCV valve

Replace crankcase ventilation filter

Lubricate the suspension

Lubricate steering linkage

Inspect throttle body linkage

Every 30,000 miles

Replace automatic transmission fluid

Replace brake fluid

Replace crankcase emission filter

Replace end links

Replace engine coolant

Replace fuel filter

Replace ignition rotor

Replace spark plugs

Inspect brake pads

Inspect drive belt

Inspect engine coolant hoses

Inspect exhaust heat shields

Inspect ignition wires

Inspect rotor cap

Inspect seat belts for wear and operation

Inspect wheel bearings

Inspect wheel rotors
